



# Shelving Unit

## MODEL G8162

### INSTRUCTION SHEET

The Model G8162 Shelving unit (**Figure 1**) features a 440 pound weight capacity and a keyhole adjusting system.

#### Box 1 Contents (Figure 2)

A. Legs..... 4

#### Box 2 Contents (Figure 2)

B. Shelves..... 4

C. Short Crosspieces..... 8

D. Long Crosspieces..... 8

E. Plastic Feet..... 4

#### Assembly

1. Lay the legs out so the corners face out and the bottom of the keyholes point down.
2. Press the plastic feet on the bottom of the legs.
3. Working from the bottom up, determine where you want to locate the first shelf.
4. From the inside corner of a leg, place the two studs from the front side of a crosspiece through the top of the keyhole and press down. Repeat this on the other leg, noting the position by counting the number of keyholes from the bottom.
5. When all for crosspieces are installed, lay a shelf down on top of the crosspieces.
6. Repeat **steps 4–5** for remaining shelves.

*If you need additional help with this procedure, call our service department at: (570) 546-9663.*



Figure 1. Model G8162.


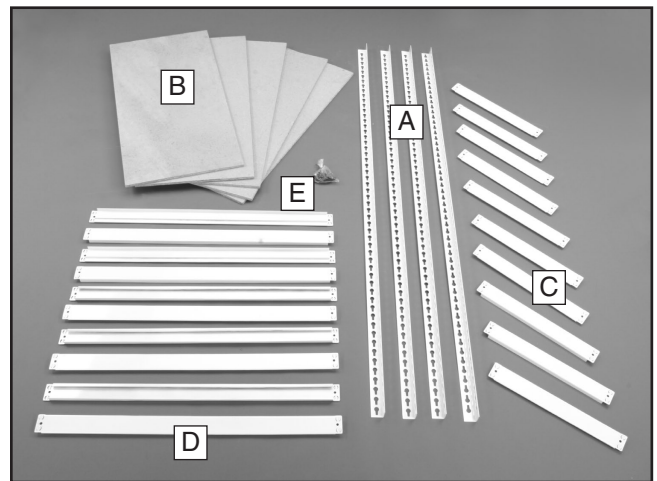


Figure 2. Inventory parts.

### WARNING

Tipping a stocked shelf can cause severe injury or death. Secure unit to wall or other stationary object.

# G8162 Parts Breakdown and List

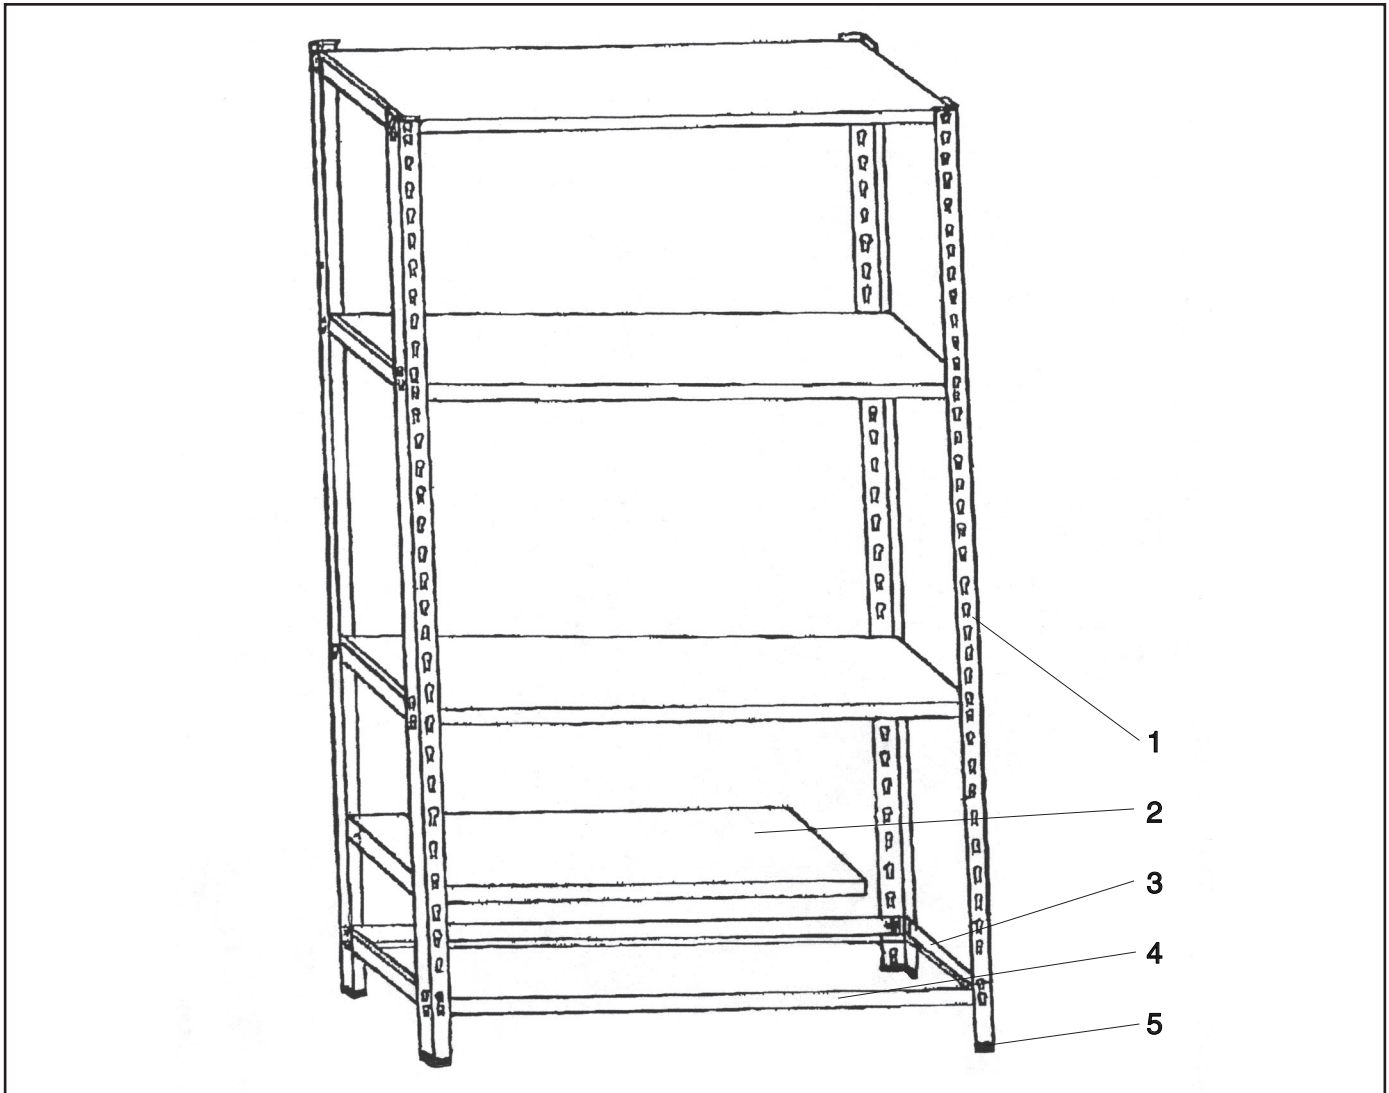

REF	PART #	DESCRIPTION
1	P8162001	LEG
2	P8162002	SHELF
3	P8162003	SHORT CROSSPIECE

REF	PART #	DESCRIPTION
4	P8162004	LONG CROSSPIECE
5	P8162005	PLASTIC FEET

COPYRIGHT © JULY, 2004 BY GRIZZLY INDUSTRIAL, INC.  
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE  
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**  
#PC6406 PRINTED IN CHINA